

## Vuforia Eyewear Calibration Instructions

### SETUP




Print the calibration page with 'Actual size' or 'Scale: 100%' option. The stones image should measure 247x173mm.

Place the calibration page on a wall in front of you. Make sure that the center of the page is level with your eyes and lays completely flat.

Open the Calibration Assistant on your digital eyewear.

### CALIBRATE

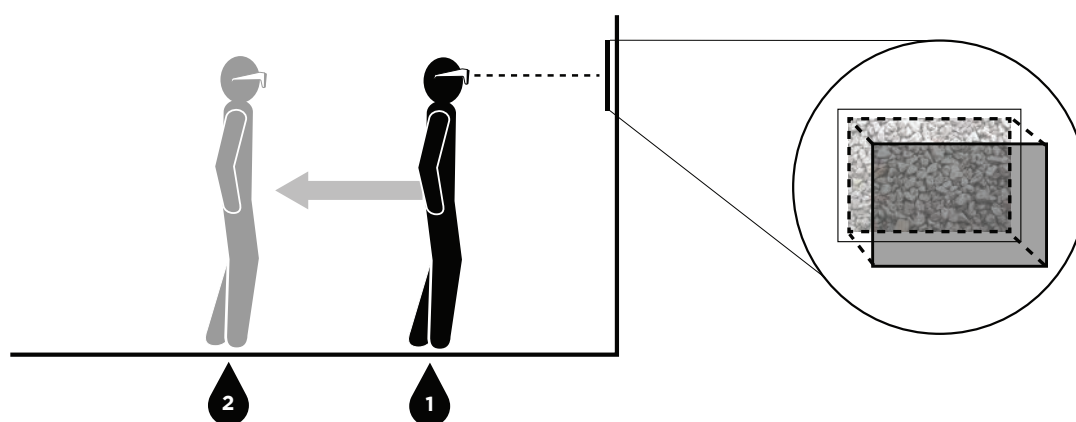

R1

Look at the calibration page and **close your LEFT eye**. **Align the red rectangle** so that all of its sides line up with the sides of the "stones" image on the page. When you have all sides aligned, **press & hold the button** on your eyewear to continue.

R2

**Move backward** a couple of steps and **keep your LEFT eye closed**. Align the red rectangle again and when ready, **press & hold the button** on your eyewear to continue.

L1

**Move forward** to your first position and **close your RIGHT eye**. Align the red rectangle again and when ready, **press & hold the button** on your eyewear to continue.

L2

**Move backward** a couple of steps again and **keep your RIGHT eye closed**. Align the red rectangle once more and when ready, **press & hold the button** on your eyewear to continue.

### REVIEW



You should see a red rectangle when looking at the calibration page.

With both eyes open, move around and check that the red rectangle closely matches the size of the calibration image, and that it stays affixed to the calibration image.

If this isn't the case, please Redo calibration.

